


KEURIG®

K•ICED™ Essentials

Use & Care Guide

Get the most from your
new Keurig® brewer

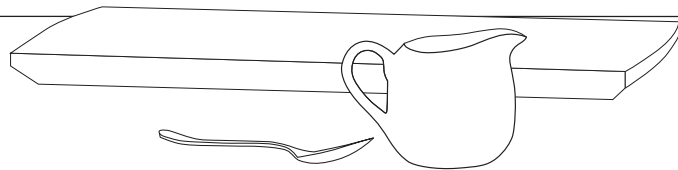


Before You Brew

1 Plug & Place


Remove packing tape from brewer. Plug into an outlet.

Place a large mug (10oz minimum) on the drip tray.

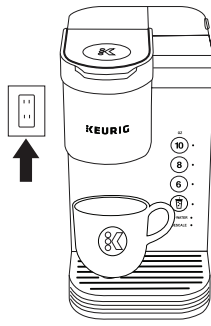

3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically.

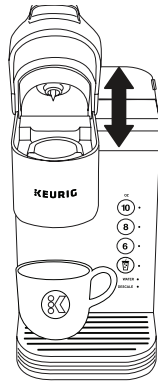


2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter, install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the tank is seated properly in the base. Replace lid.

NOTE: Do not use distilled water.

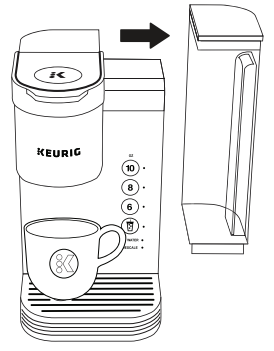


4 Cleansing Brew

The 3 cup sizes will blink. Press the **8oz** button to start a cleansing brew. Pour the hot water into the sink.

Do not remove the water reservoir or lift the handle once the brew button has been pressed until the brew has completed.

The one-time setup process is now complete and you are ready to brew!

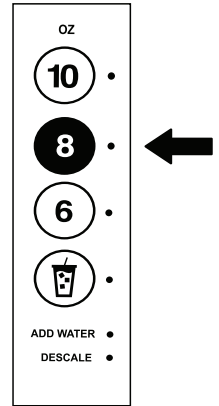


Brew Your First Cup

TO BREW HOT


1 Place Mug & Pod

Place a mug on the drip tray. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

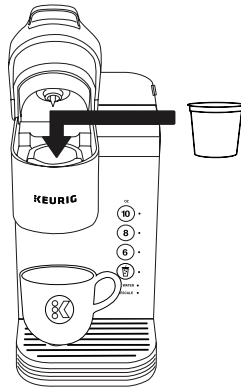

2 Brew & Enjoy!


The 3 brew sizes will blink. Select and press your brew size. The light will remain illuminated while brewing. Brewing is complete when the sizes are all illuminated. Lift the handle and dispose of the K-Cup® pod.

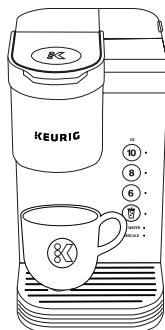

TO BREW OVER ICE

1 Place Tumbler & Pod


Fill tumbler with ice and place on the drip tray (for more height, remove drip tray). Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

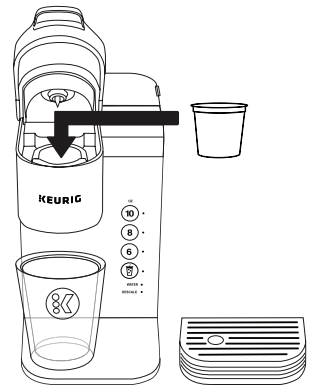

2 Brew & Enjoy!

Press the **BREW OVER ICE** button. The **BREW OVER ICE** light will remain illuminated while brewing.

Brewing is complete when all sizes are illuminated. Lift the handle and dispose of the K-Cup® pod.

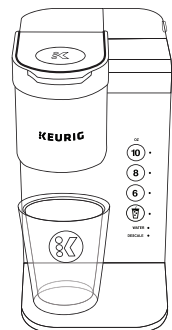

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process. Do not brew into glass.

NOTE: For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

Brewer Features

FAST & FRESH-BREWED: Coffee made in minutes.

BREW OVER ICE: Brew a refreshing iced coffee in minutes. The **BREW OVER ICE** feature automatically adjusts brew temperature — starting hotter to help extract full flavor, then cooling down for less ice melt.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL-MUG FRIENDLY: Accommodates travel mugs up to 7" tall.

SIMPLE BUTTON CONTROLS: Just insert any K-Cup® pod and use the button controls to brew a delicious cup.

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

COMPATIBLE WITH THE MY K-CUP® UNIVERSAL REUSABLE COFFEE FILTER: Brew your own ground coffee (sold separately).

AUTO OFF: Automatically turns your brewer off 5 minutes after the last brew for energy savings, but will be ready to brew as soon as it is powered on again.

HIGH ALTITUDE: To ensure your brewer works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your brewer.

1. Begin with the brewer plugged in and powered off.

2. Press and hold the **POWER** button and **10oz** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Brewing Mode has been enabled.

3. High Altitude Mode will remain enabled until steps 1-2 are repeated and the **12oz** light turns off and the **8oz** light turns on to confirm that the High Altitude Brewing Mode is disabled.

HIGH ALTITUDE BREWING: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

HOW TO RECYCLE K-CUP® PODS IN THREE STEPS

⚠ **CAUTION: POD IS HOT.**
ALLOW TO COOL AFTER USE.

PEEL

Starting at puncture, peel lid and dispose.



EMPTY

Compost or dispose of grounds. (Filter can remain.)



RECYCLE

Check locally* to recycle empty cup.



*Not recycled in all communities.
Visit Keurig.com/recyclable to learn more.


Caring For Your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning.




Brewer Exterior

Keep your Keurig® brewer looking its best by cleaning the exterior from time to time. Just clean with a damp, soapy, lint-free, nonabrasive cloth. Never immerse the brewer in water or other liquids.



Water Reservoir

The water reservoir should be cleaned periodically by wiping the inside of the reservoir and underside of the lid with a damp, nonabrasive, lint-free cloth. Do not dry the inside of the water reservoir with a cloth, as lint may remain. Allow the reservoir to dry completely. Hand-wash only.

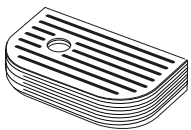

Drip Tray

The drip tray overflow should be emptied and cleaned occasionally. To remove, lift up off brewer base, keeping it level to avoid spilling. Rinse and clean with a damp, soapy, lint-free, nonabrasive cloth. Hand-wash only.

Regular Maintenance

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to preserve the long-term health of your brewer


*To turn off Descale notification, follow the full descaling procedure as outlined in this guide.

If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid and drip tray with warm, soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

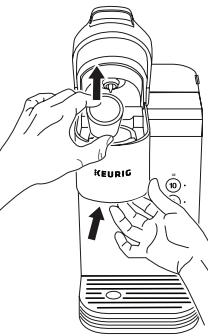


K-Cup® Pod Holder

To remove the K-Cup® pod holder from the brewer, lift the handle and grasp the top of the K-Cup® pod holder with one hand while pushing up on the bottom of the K-Cup® pod holder from underneath with the other until it releases. After cleaning, align the K-Cup® pod holder with the opening, using the two front ribs as a guide, and snap into place from the top.


CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

NOTE: Always remove and dispose of the used K-Cup® pod after brewing.

Funnel

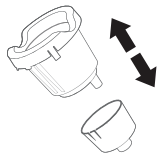


Washing the funnel ensures a fresh beverage experience. The funnel should be washed regularly and can be removed from the K-Cup® pod holder by pulling on it until it pops off. To replace it, orient the snaps to the indent and just snap it back onto the K-Cup® pod holder.

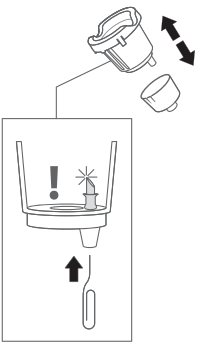

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

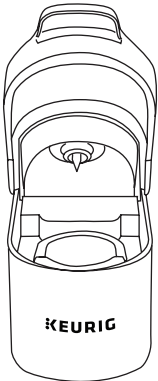

Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean the holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into all the holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run a cleansing brew two times. Do not insert a K-Cup® pod.

Descaling Procedure

Note: The full descaling procedure must be completed to turn off the Descale light.

You will need: a large ceramic mug (10oz minimum), fresh water, Keurig® Descaling Solution, and access to a sink.

Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® pod holder. The descaling procedure takes approximately 20 minutes.

STEP 1: Prepare the Brewer

Pour the entire bottle of Keurig® Descaling Solution into an empty water reservoir.

Then fill the empty bottle with water and pour into the water reservoir.

Do not insert a K-Cup® pod.

Place a large mug on the drip tray.

STEP 2: Descale the Brewer

To activate Descale Mode, begin with the brewer plugged in and powered off, then press and hold the **6oz** and **10oz** buttons together for 3 seconds.

When flashing, press the **8oz** button to start the descaling process.

Once the brew is complete, pour the hot liquid into the sink.

Continue to brew 8oz until the **ADD WATER** light illuminates.

STEP 3: Fresh Water Rinse

Empty the water reservoir and refill to the **MAX FILL** line with fresh water.

When flashing, press the **8oz** button to start the rinsing process.

Once the brew is complete, pour the hot liquid into the sink.

Continue to brew 8oz until the **DESCALE** notification turns off.

The brewer has now exited Descale Mode and will be ready for use!

NOTE: The cleaning action of Keurig® Descaling Solution may result in a “foam” dispensed from the brewer. This is natural, as the solution is reacting with the scale inside. For a brewer that is heavily scaled, the brewer may not fill properly after the descaler is added. If this occurs, you may see little to no output dispensed, followed by the sound of air blowing out. If this occurs:

- Turn off and unplug the brewer.
- If there is Keurig® Descaling Solution in the water reservoir, discard the contents, rinse the water reservoir thoroughly, and refill with water.
- Plug the brewer back in, power on, and repeat the Step 3 Fresh Water Rinse cycle. The brewer should begin to function normally as the solution is rinsed out and the scale is removed. If problem persists, allow brewer to sit unplugged for at least 30 minutes before continuing with the rinse.

Troubleshooting

Grounds in Your Coffee

Grounds may have gathered in the exit or entrance needles and can be cleaned using a straightened paper clip or similar tool.

- Clean the exit needle of the K-Cup® pod holder. Refer to the exit needle care instructions.
- Clean the brewer entrance needle. Refer to the entrance needle care instructions.

For optimal enjoyment and to limit grounds in your cup during hot water brews or when transitioning from brewing a coffee pod to a non-coffee pod (e.g., tea or cocoa), clean the exit and entrance needles per the instructions provided and perform two cleansing brews.

Brewer Will Not Brew

- The water level must be at the minimum line to brew. Add an additional 2oz of water to the reservoir to ensure the minimum fill level has been met, then press the brew size button. Repeat until the brewer begins to dispense.
- Lift up and replace the reservoir to ensure a secure fit on the base.

Brewing a Partial Cup

- **BREW OVER ICE** dispense volume includes ice melt. The **BREW OVER ICE** setting automatically adjusts brew

parameters to take into account ice melt, delivering the desired beverage with a final volume equal to the selected brew size.

- Unplug the brewer and plug it back in to put the brewer in idle state (all lights off). Press and hold the **10oz** button for 5 seconds until water starts dispensing. Then release and let the water purge. Discard the contents into the sink.
- The exit needle may be clogged. Refer to the exit needle care instructions.
- Clean the K-Cup® pod holder; see K-Cup® pod holder care instructions.
- The brewer may need to be descaled. If you have repeated the descale procedure on your brewer two times and it is still only brewing a partial cup, contact Customer Service.

Brewer Does Not Have Power or Shuts Off

- Brewer does not have a power button. To turn the brewer on, press any button or open the handle. The brewer automatically turns off after 5 minutes of inactivity.
- Plug brewer into its own outlet. If the electric circuit is overloaded with other appliances, your brewer may not function properly. The brewer should be operated on its own circuit, separate from other appliances.
- If the brewer still doesn't have power, contact Customer Service.

Helpful Hints

Water quality varies greatly. If you notice an undesirable taste in your beverage (such as chlorine or mineral tastes), we recommend using bottled or filtered water. Do not use distilled water.

Service

Beyond these recommended cleaning and maintenance procedures, this brewer is not user serviceable. For service, please refer to the Warranty section of this guide.

Storage

Empty the water reservoir before storing or transporting and take care to ensure that you store your brewer in a safe and frost-free environment. When you prepare to use it after storage, we recommend rinsing the water reservoir with fresh water and descaling the brewer as detailed in the Descaling Procedure section.

If you plan to move your brewer to a different location, turn the brewer off, unplug it, and empty the water reservoir. If your brewer has been in an environment below freezing, please be sure to let it warm to room temperature for at least 2 hours before using.

Click or Call!

Have Questions?

We're here to help. Visit support.keurig.com for step-by-step videos on cleaning, descaling, and more.



Still Need Help?

Give us a call at
1-866-901-BREW (2739)

Warranty

LIMITED ONE-YEAR WARRANTY

Keurig Green Mountain, Inc. (Keurig) warrants that your brewer will be free of defects in materials or workmanship under normal home use for one year from the date of purchase. It is recommended that you register your brewer on [keurig.com/new](https://www.keurig.com/new) so that your purchase information will be stored in our system. Keurig will, at its option, repair or replace a defective brewer without charge upon its receipt of proof of the date of purchase. If a replacement brewer is necessary to service this warranty, the replacement brewer may be new or reconditioned. If a replacement brewer is sent, a new limited one-year warranty will be applied to the replacement brewer.

This warranty only applies to brewers operated in the United States and Canada. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province.

Only the use of Keurig® K-Cup® brand pods and accessories will guarantee the proper functioning and lifetime of your Keurig® brewer. Any damage to or malfunction of your brewer resulting from the use of non-Keurig® pods and accessories may not be covered by this warranty or may result in a service fee if the damage or malfunction is determined to be caused by such use.

WHAT IS NOT COVERED BY THE LIMITED WARRANTY?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase.

Nor does this warranty cover damages caused by use of non-Keurig® pods or accessories, services performed by anyone other than Keurig or its authorized service providers, use of parts other than genuine Keurig® parts, or external causes such as abuse, misuse, inappropriate power supply, or acts of God.

OTHER LIMITATIONS


THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, KEURIG HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR KEURIG® BREWER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

HOW DO YOU OBTAIN WARRANTY SERVICE?

Keurig® brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing, simply call Keurig Customer Service at our toll-free phone number, 1-866-901-BREW (2739). Please do not return your brewer for servicing without first speaking to Keurig Customer Service to obtain a Return Materials Authorization (RMA) number. Keurig® brewers returned without an RMA number will be returned to the sender without servicing.

K·ICED™ Essentials

SINGLE SERVE COFFEE MAKER

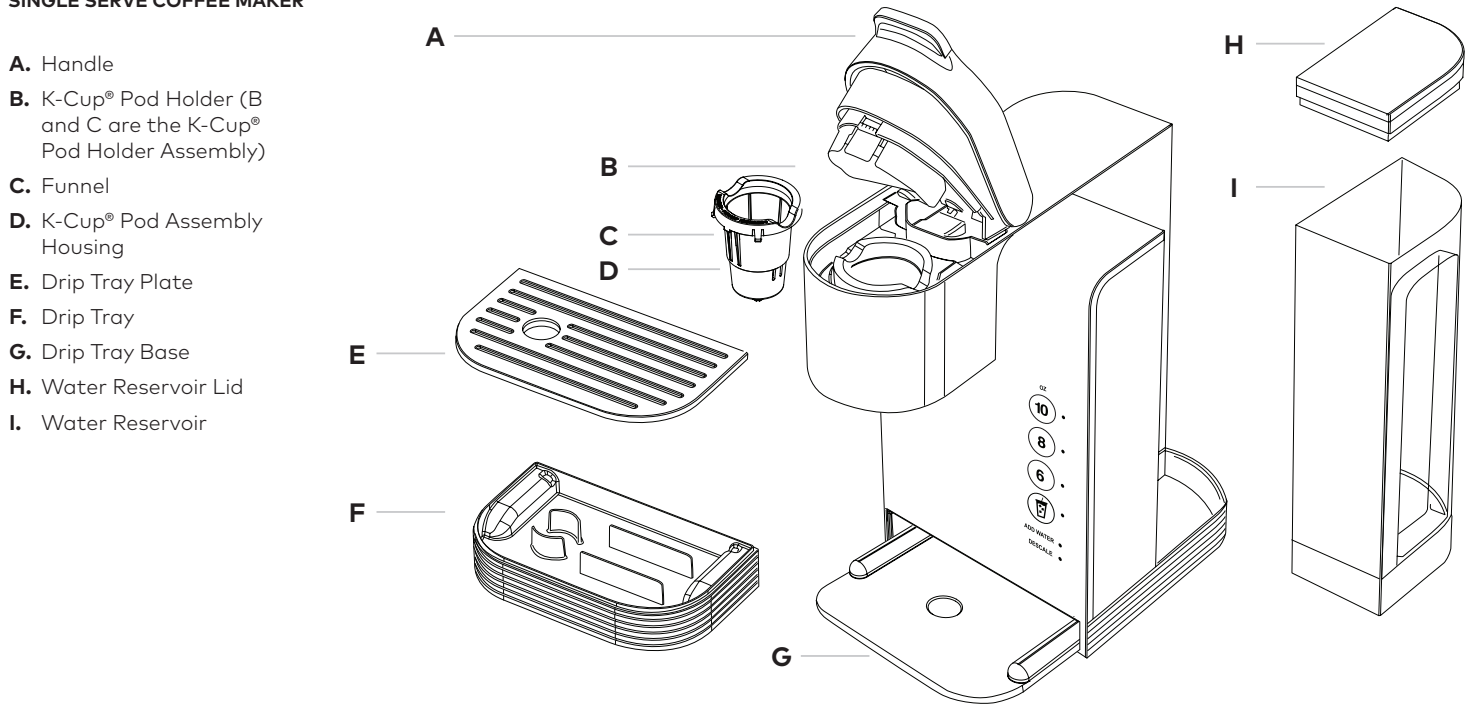

For replacement parts, please visit www.Keurig.com.

Coffeehouse taste in your own home.

FIND YOUR PERFECT POD

With over 75 brands and hundreds
of varieties, find your match at

keurig.com/new